

NuStart

1 RUN

N/C RUN CAP

2 ACTIVE

3 START WINDING

N/C NOT USED

4 COMMON

Ensure the cable is placed through the current clamp.