

NuStart

1 RUN


N/C RUN CAP

2 ACTIVE

3 START WINDING

N/C NOT USED

4 COMMON

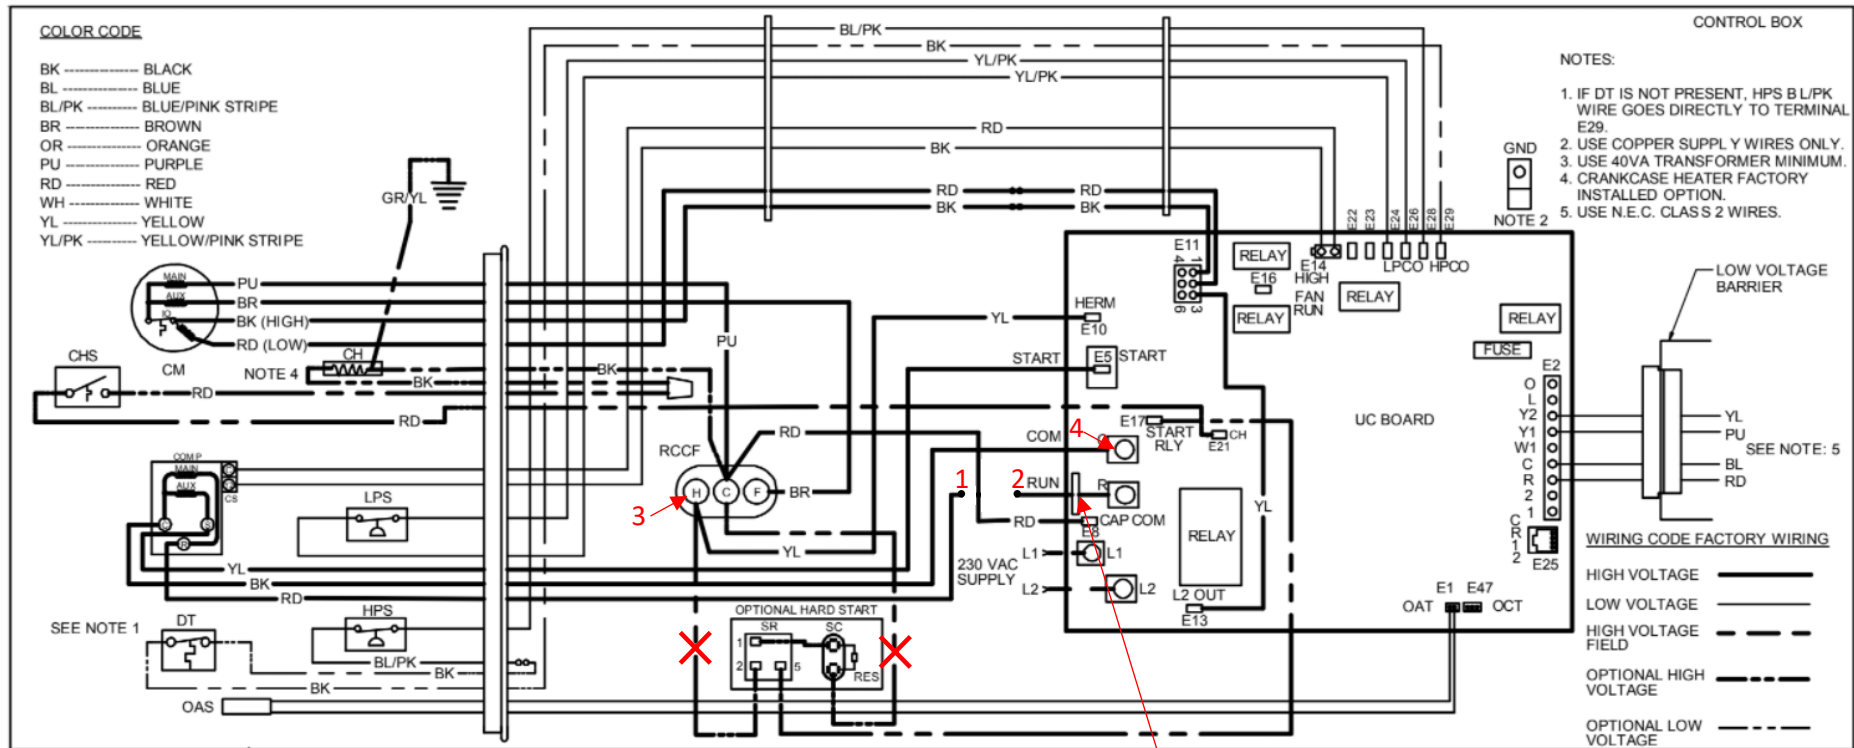

Ensure the cable is placed through the current clamp.