



NuStart	
1	RUN
N/C	RUN CAP
2	ACTIVE
3	START WINDING
N/C	NOT USED
4	COMMON

N/C – Not Connected

Note: Connection to SureStart's ACTIVE terminal must **not** be made at the terminal of the run capacitor (RC).