



Ensure the cable is placed through the current clamp.

NuStart

- | | |
|-----|---------------|
| 1 | RUN WINDING |
| N/C | RUN CAP |
| 2 | ACTIVE |
| 3 | START WINDING |
| N/C | ON/OFF |
| 4 | COMMON |