



Remove run compressor connection from RUN (RD) and tie the compressor to the SureStart's [1]  
 Connect [2] to RUN (RD).  
 Connect [3] and [4] as shown.

	NuStart
1	RUN
N/C	RUN CAP
2	ACTIVE
3	START WINDING
N/C	NOT USED
4	COMMON