


NuStart 1	
1	RUN
N/C	RUN CAP
2	ACTIVE
3	START WINDING
N/C	NOT USED
4	COMMON

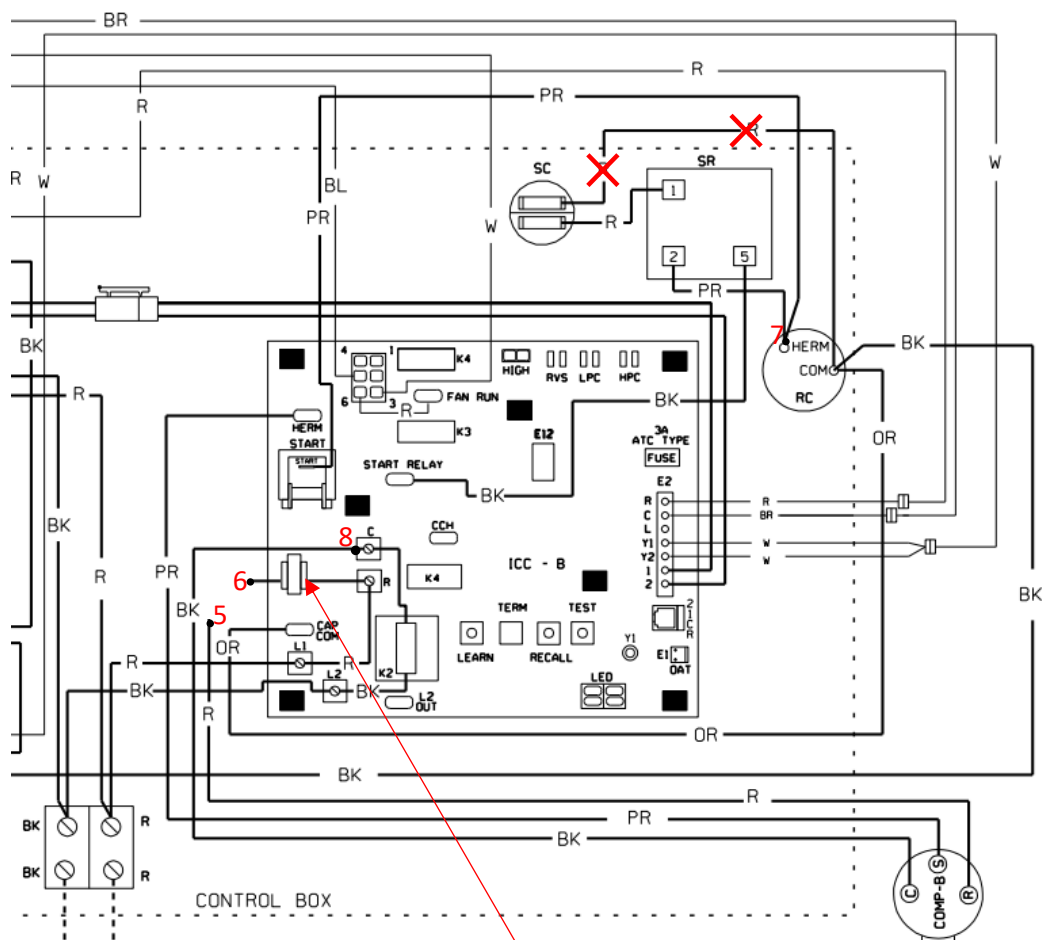

Ensure the cable is placed through the current clamp.

NuStart 2	
5	RUN
N/C	RUN CAP
6	ACTIVE
7	START WINDING
N/C	NOT USED
8	COMMON