EOFK TREE


(42176)

4217-W3

CORK INSULATION TAPE





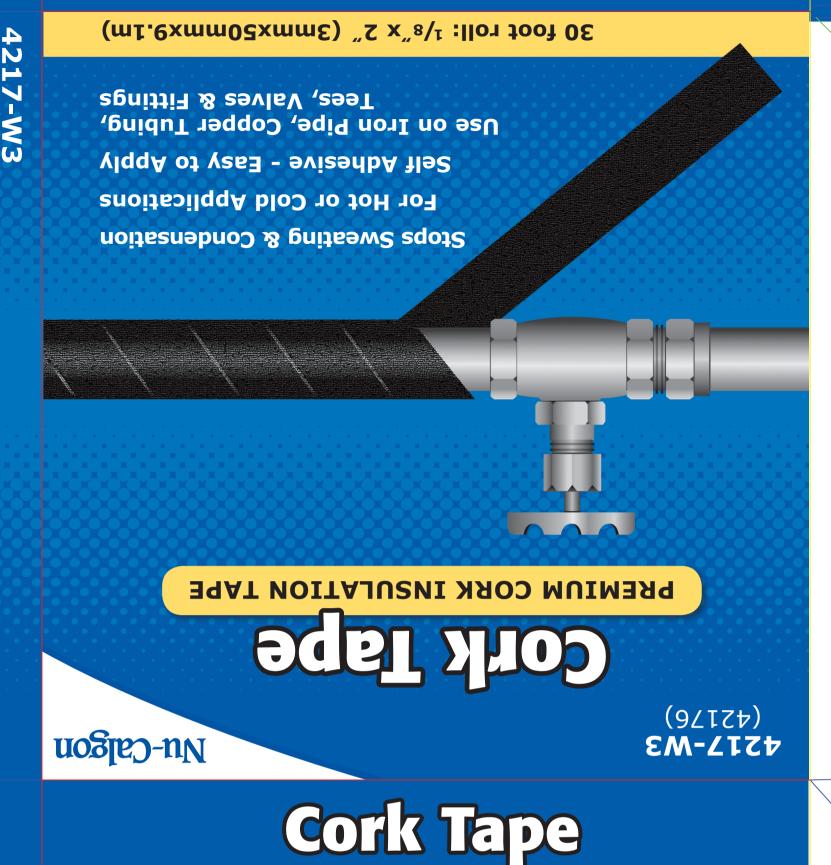



- Sticks to Itself
- Needs No Adhesive
- Non Toxic

DIRECTIONS FOR USE:

1 Cut end at an angle and


First, remove moisture and excess dirt from pipe. Then, follow the directions below to apply Cork Insulation Tape.



2 Start end and coil loosely around pipe.





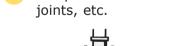

Press tightly and cover exposed pipe.

One layer of tape will protect under most conditions. If pipe or outside temperatures are very low, or if humidities are very high, additional layers may be required. Contact manufacturer for additional




Recommended Service Temperature: -30°F to 200°F

One Roll Spirally Wound Making Butt Joints Will Cover:

30 ft. of 1/2" O.D. Pipe 16.5 ft. of 1" O.D. Pipe 11.5 ft. of 1 1/2" O.D. Pipe 21.5 ft. of 3/4" O.D. Pipe 13.5 ft. of 1/4" O.D. Pipe

Cut tape with scissors along the proper line to obtain the proper starting angle for 50% overlap spiral wrapping. Start wrapping by placing cut tape edge against fittings. Save scraps for use around fittings.

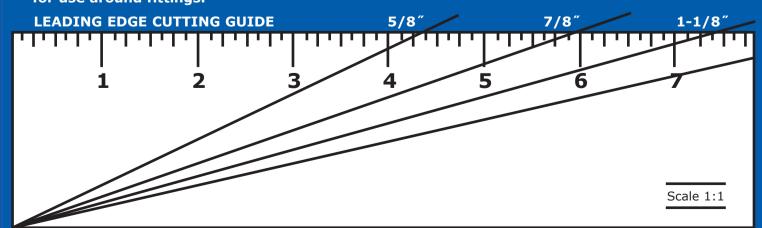





MARNING: This product can expose you to chemicals including bitumen, which is known to the state of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

Nu-Calgon • 2611 Schuetz Road St. Louis, MO 63043 Customer Service: 800-554-5499 Chemical Emergency: 800-424-9300 www.nucalgon.com (818) Calgon is a licensed trade name.